

THE FOLLOWING ARE DANGER

DANGER

the following are urgent cases:

- Power wire damaged or twisted. Power is sometimes on and off automatically.
- Power wire or plug is overheat.
- Compressor works but cooling system no function.



Warning



Disassembly forbidden

Please don't repair or reconstruct the machine if you are not technician.

 
- Avoiding danger resulted from wrong operation.
- Stop using, pull out the plug and contact the seller.

Products renovation rights reserved, no additional notice.

General dealer/dealer

User manual

Cooler/cellar

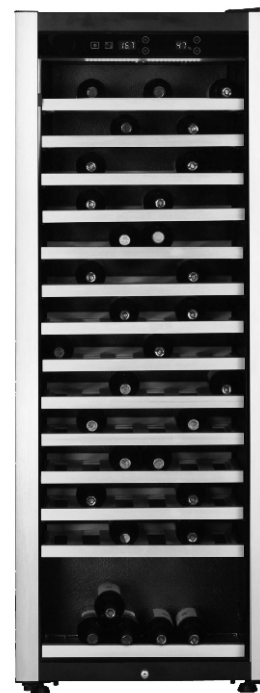

Content

Security attention	1
Structure and names of parts	2
Preparation before using the machine and instructions	5
Sketch map of fittings installation	8
Malfunction detect and after-sale-service	9

Thank you very much for using our products.

Please make sure you follow the instructions when using our products.

Please keep the instruction.

SECURITY ATTENTION

For security concern and avoiding danger and damage, please do obey the instructions below:

■ Ignorance on the following content may lead to danger and damage:



These are forbidden actions



These are compulsory actions



Warning

serious incident
may happen



 
Attention

hurting or damage
may happen

Warning




Hold the plug when cutting the power off; don't hold the wire and do that, otherwise wire may be damaged and lead to creepage and electric shock.



When wire damaged or the jack become flexible, please do not use it in case electric shock and short circuit happen.



 
Please don't repair or reconstruct the machine if you are not a technician. Avoiding danger resulted from wrong operation.

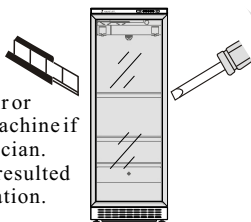

Power connection: one machine one jack, please don't share one jack with other electrical appliance, and the capacity must be over 15A.



 Attention



machine placing sketch map



 
Clean the dust on power plug. Due to moisture, creepage may happen if dust accumulates.



No damage to the power wire by twisting, pulling, screwing and fettering. Creepage and electric shock may happen.



No incline more than 45° when transporting.

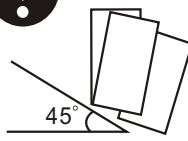

Must be earthing

Earth wire can't be connected to earth wires of gas pipe, tap pipe, lightning rod and telephone.

Some places (high humidity areas for example)

Need to install breaker. It will be danger without breaker.

Don't install at places with possibility of leaking easy-burning and erodent gas.

The gas may damage the machine even lead to explosion.

KEY TECHNOLOGY AND ADVANTAGE

 
15 FEATURES



1, Thick foaming layer



2, Activated carbon ventilation

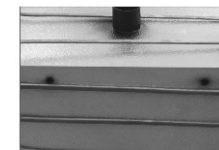

3, Copper refrigeration control



 
4, Italy Zanussi compressor



5, Stippled aluminium wall




6, LED side lights

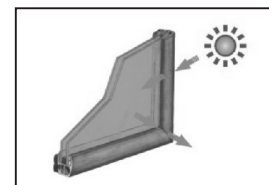

7, Against U.V. glass door



 8, Low power consumption

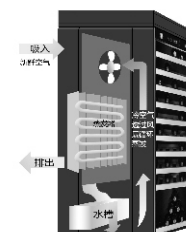

9, Humidity circulation



10, Intelligent temperature control



11, Remote control



12, Door lock



13, Solid wooden shelves



14, Removable shelves



15, Wood glass holder

MALFUNCTION DETECT

Malfunctions	Detect points
Start indicator or digital display failure	The plug is well connected to jack
	The switch, jack, fuse and power wire are all no problem
Sound abnormal	The machine is placed reposefully or not?The fixing bolt of compressor is loosened or missed
	Bolt of condenser loosened? Friction between pipeline and the cabinet body
	Fan is loosened or dusty? Friction on fan
Cabinet body creepage	Plug is earthing
	Power wire is crushed and damaged
	Electric parts are damp or watered
Humidity is lower than standard or humidity system failure	Water in the water tank is enough or rightly poured
Lack of refrigerant or cooling failure	Temperature detector can't rightly control the temperature.
	Lack of refrigerant or leaking
	Pipeline jamed
	Compressor malfunction or damaged
Display abnormal	Malfunction of upper temperature sensor(open circuit)E1;
	Malfunction of downside temperature sensor(open circuit)E2;
	(Single temperature cooler/cigar cooler)Malfunction of underside temperature sensor(open circuit)E3;
	ERO(on temperature display window) twinkles means the temperature is abnormal.

AFTER-SALE-SERVICE

Free maintainece is acceptable when:

- 1. on warrant time period, malfunctions happen when using the machine according to the instructions.
- 2. on warrant time period, exchanging products is acceptable only when the packing and apperance of the machine wouldn't baffle selling.
- 3. on warrant time period, no free maintainece when:
 - (1)Malfunction and damage results from misusage and illogical repairing;
 - (2)Malfunction and damage results from shipping and falling after sale;
 - (3)Malfunction and damage results from fire, flood, earthquake, gas, reading lamp, thunder, abnormal voltage and other

 
- natural disaster;
- (4)Malfunction and damage when on bus or ship and soon;
- (5)Guarantee booklet or invoice lost;
- (6)client name, date of purchase and seller not marked or been changed;
- (7)dusty of cabinet body after using
- (8)Malfunction and damage results from exchange of refrigerant and so on.
- 4. As for products named in this book, please turn to our agent for help if the seller can't offer the maintainece.
- 5. evection maintainece is ok, while the cost will be on clients charge.
- 6. please keep this book and show us when maintainece needed. It will be valid only on the warrant time.

Warning!

- 1, Weak or mental illness people including child, please don't use this machine, they can use it only under the instruction or assistance of responsible people.
- 2, The children should be supervised in case of they would play the machine.


NOBLE SERIES
STRUCTURE AND NAMES OF PARTS

Single Zone Cabinet For models ILC and ILWY

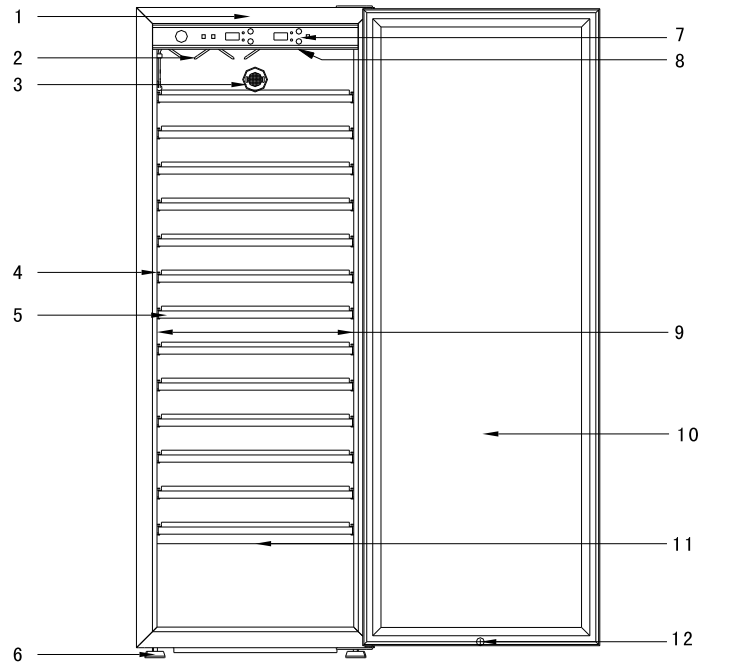


- 1. cabinet body
- 2. glass holder(optional)
- 3. activated carbon intake
- 4. orbit(removable)
- 5. solid wooden rack
- 6. adjustable feet
- 7. control panel
- 8. top lighting
- 9. interior side lighting
- 10. glass door against U.V.
- 11. water tank
- 12. door lock

 Parts name of control panel

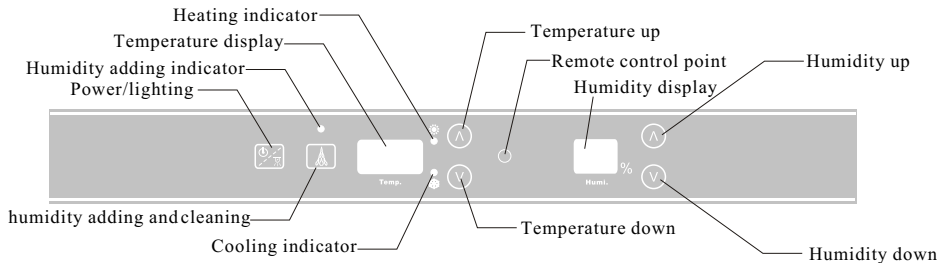


Dual zones or three zones cabinet

 Models ILWY121 and ILWY165

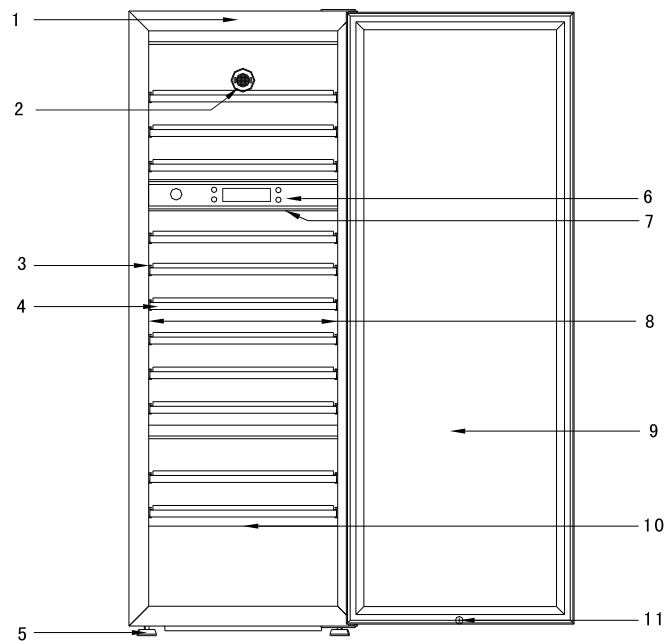


- 1.cabinet body
- 2.activated carbon intake
- 3.orbit(removable)
- 4.solid wooden rack
- 5.adjustable feet
- 6.control panel
- 7.top lighting
- 8.interior side lighting
- 9.glass door against U.V.
- 10.water tank
- 11.door lock

 
Parts name of control panel

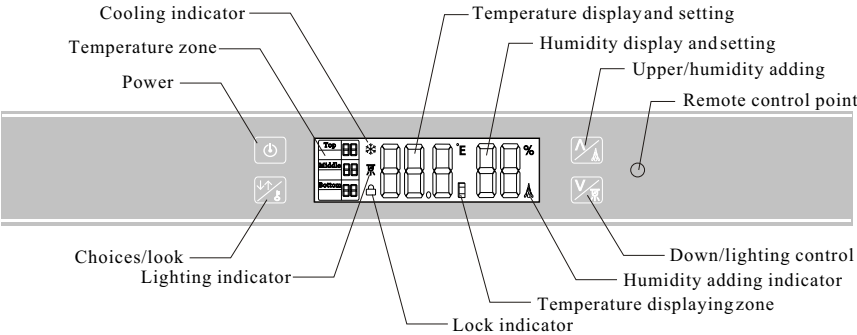


Rack installation sketch map

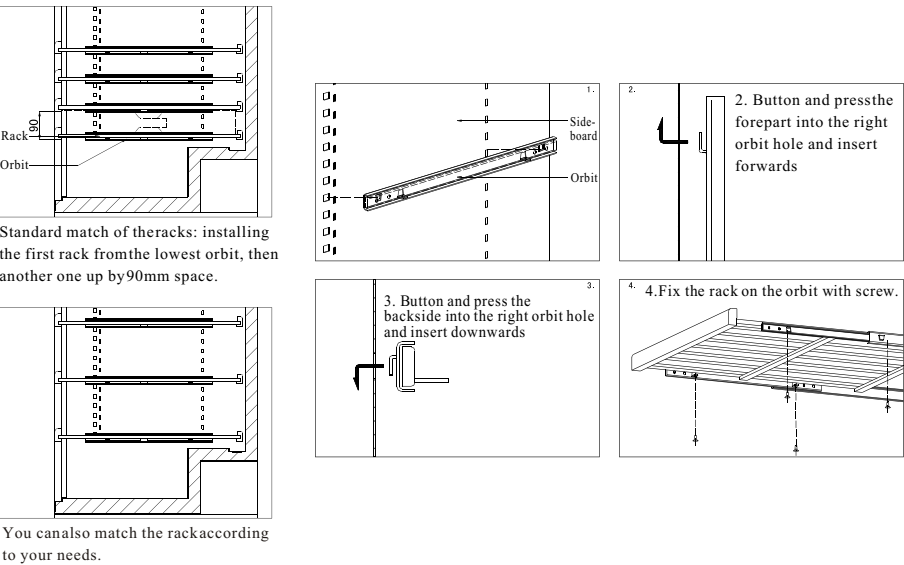 


Sketch map of wine placing on rack

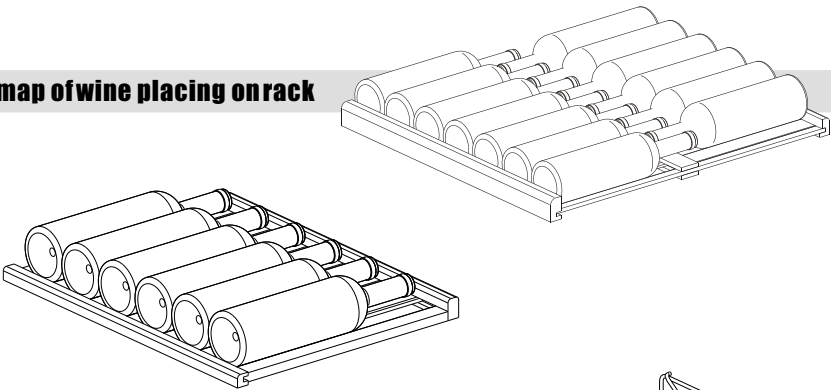 


Sketch map of glass holder usage

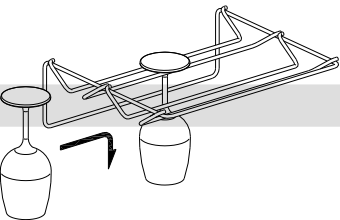 

Model : ILC44,ILC55,ILC77

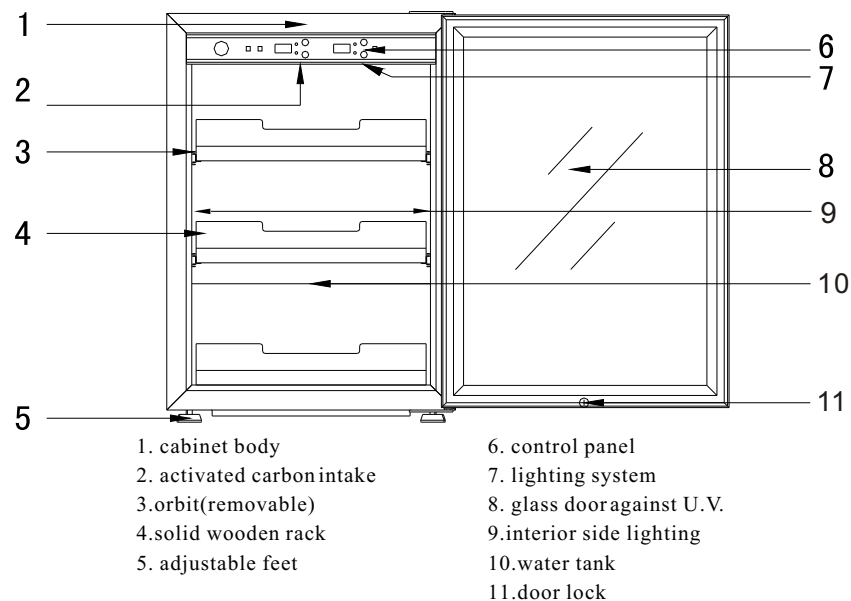 

Parts name of control panel

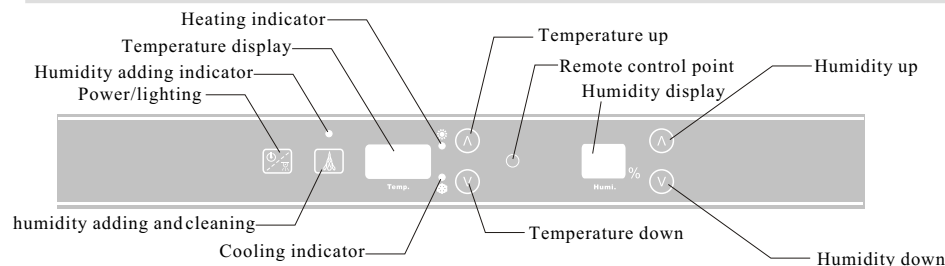 

Important warning!

- 1, long times no work:
If the machine is off work for a long time, but there is still wine or cigar inside the cabinet, the cigar or items will get musty and smell bad.
- 2, cleaning for the humidity system:
On the working condition, press the "▲" button with a long time. Then you can see water drop down from the interior board, wipe the water with a dry cloth till no water and clean the water tank. Finally re-inject 500ml-1000ml fresh water to the cabinet.
Note: When cleaning the water tank, it's better to withdraw the bottom rack with orbit first.
- 3, The temperature and humidity of the machine is relatively stable on the temperature of 25°C. If the temperature in the house is different, the temperature and humidity would have some fluctuate.
- 4, for dual or three zone cellar, there are valve in the cooling system, when it is on the working, you can hear a "tap-tap" voice, this is the normal case.
- 5, for humidity:
Since the moisture changes case the temperature and pressure of the air in the cabinet is different time to time. Thus the humidity fluctuates frequently, so we advise regard the humidity as a reference point.

- 6, When the cabinet is on the cooling condition, cooling indicate light is blue; when the temperature is on the raise, the red light is on.
- 7, Dynamic cooling method is the cabinet's feature, when the temperature declines one degree, the system will stop 5 minutes to keep a stable humidity level in the cabinet. One by one, till it down to the setting level.

Dual or three zones cabinet

 
- 1, plug in and make sure the power is stable.
 - 2, press the "⏻" power button for 3 seconds to start the machine system.
- Note:
- a. "⏻" button is turned on when pressed and pressed 3 seconds turns off the power.
 - b. The cabinet will self-lock in 30 seconds when nobody uses it. If you can't operate it, please press "🔒" choice/lock button for 3 seconds to unlock, you can use it after a "beep-beep" voice.
- 3, press "💡" button, turn on the lights, it's more convenient to get or store the wine. Besides, you can also decline the humidity or temperature level.
 - 4, temperature/humidity setting:
Under the unlock condition, press "choice/unlock" button enter the temperature or humidity setting.

As the below circle: Top Area → Middle Area → Bottom Area → Humidity → Out


When in the temperature or humidity setting area, you can see the numbers are blinking. Press "up/add humidity" and "down/lighting" button, set the temperature/humidity you want. The temperature changes 0.1°C once a time, the humidity changes 1% once a time, and it's change faster when pressed it with long time. The temperature can be set between 5°C and 22°C, and humidity can be set between 50%--80%. It's advice a temperature between 12°C--18°C, and humidity 65%.

- 5, press "▲" button turns on the humidity adding system.

Note: "▲" is humidity on/off button, when it works the humidity light is blinking. It's fit for place which is dry in the house, if the air is wet outside, please turn off the button.

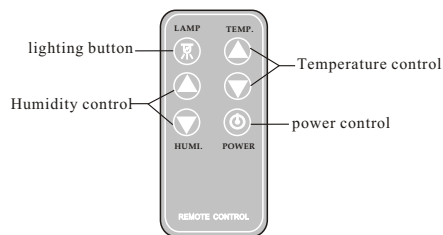

Single remote control

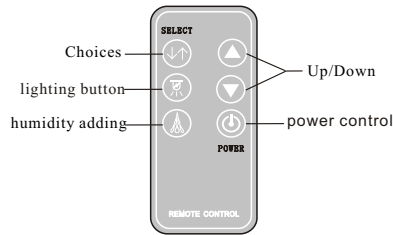 

Dual remote control

Instructions for the first using time

Preparation before using the machine



- 1, Open the package, check the accessories.
- 2, Well place the machine, install in a dry and comfortable, well-ventilated area.
Do not place it near the heat source, such as place has sunshine or near the oven.
The higher temperature inside the house, the more power it consumes.
Climate models which the machine can be used is noted in the name plate behind the machine.

Climate model	temperature of the house	
SN	+10℃	to +32℃
N	+16℃	to +32℃
ST	+18℃	to +38℃
T	+16℃	to +43℃

- 3, Compared with the climate models behind the cabinet, this machine can be used in a wider climate. If the temperature is between +10℃ to +38℃ in the house, the temperature can be keep in a stable level, this is very important.
- 4, Ventilation:
The machine can place by the wall side. In order to get well-ventilated, don't cover the air vent. Also deduct it on time.
- 5, when placed it , adjust the removable feet to make sure it in a horizontal and Don't move it.
- 6, There is a plastic cover on the surface of the cabinet to protect it during transportation. You can remove the plastic after placed it, rive the plastic from the corner.

Important note!

  In order to keep all the systems running well, do not connect the power when placed it. Let's alone about one or two hours later.
The equipment is installed with humidity adding system, so it needs to add 750ml fresh water in the water pond for the first time. The adding methods are as below pictures.

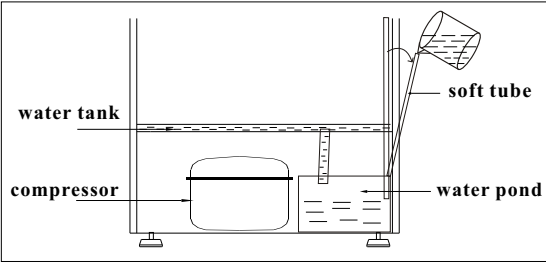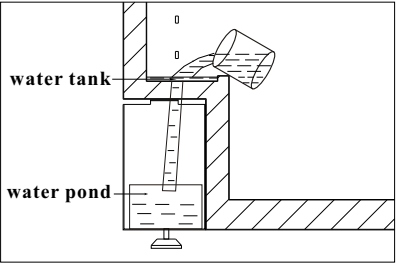

One method is open the cabiner, then add 500ml-1000ml water in the water tank.

The other method is pull the soft white tube in the back of the machine, and add 500ml-1000ml fresh water to the water pond from it. (Remark: This way is better if there are many cigars in the cooler and inconvenience to add from the water tank).

Warning:

If this machine is being use in an area with high humidity, it needn't add too much water to the cabinet. Because there is many condensate water when the machine working. If the humidity displays in a high level, you can use a rag to wipe the water to prevent it too high. When this equipment is being used in a dry area, it needs to add 500ml-1000ml water in the water pond at the first time to keep enough humidity for it. If it is being used some time and the humidity display shows a very low level than what you set for half a day or longer, then it need to add 500ml fresh water inside.

Instructions

Single zone cabinet

- 1, plug in and make sure the power is stable.
- 2, press the "⏻" power button for 3 seconds to start the machine system.
Note: a. "⏻" button has two functions, it is the system on/off function, and the lighting on/off function. Press the button with long time is turn on/off the system and press the button time by time turn on/off the lighting.
- 3, press "💧" button turns on/off the humidity system. "💧" button is the humidity automatically adding system; the system is working when the green light is on. It's fit for place which is dry in the house, if the air is wet outside, please turn off the button.
- 4, temperature setting:
The left window in the control pand is temperature display window. On the Working condition, it shows the real temperature inside; If set a temperature, then it displays the setting temperature. Press the up/down button, get the temperature you want. The temperature changes 0.1℃ once a time, if you press with long time, it will changes faster. You can set a temperature range between 5℃--22℃, the system will remember the setting humidity and shows the real temperature after 5 seconds.
Note: It's better to set a temperature between 12℃ and 18℃ for wine.
- 5, humidity setting:
The right window is humidity display window. Press on/off button gets the humidity level. The humidity changes 1% once a time, if you press with long time, it will change faster. You can set a humidity range between 50% --80%. The system will remember the humidity and displays the real humidity inside after 5 seconds.